

User Manual



Food Warmer

User Manual

Models: 7800

08/2011

Please read and keep these instructions. Indoor use only.

Specifications

Electrical: 120V~, 60Hz; 1500W

Capacity: 19 Liter (20 Quart)



Read and understand all instructions before using this appliance. CAUTION! HOT SURFACE!

User Manual

Warnings

- This appliance must be placed on a level surface.
- Do not leave this appliance unattended while it is in use.
- Never immerse the appliance in water.
- Do not operate the appliance while it is empty.
- Do not overfill the appliance with water.
- Never move or carry the appliance when it is “ON” or if it is full of hot liquids.
- Do not attempt to repair or replace the power cord if it becomes damaged. Contact a qualified service agent.
- Be careful not to touch any hot surfaces. Make sure the power cord does not come in contact with any hot surfaces.

Operation

Carefully unpack the Food Warmer and inspect it for damage.

- Add about 4 liters of water to the stainless steel container. Never over-fill with water. Under no circumstances should the food pan float, ever when empty. Remove any excess water immediately.
- Turn the temperature controller on. The indicator light will glow, showing that the unit is on. Adjust the temperature control dial to the correct setting:
 - a: Settings 4-6 are designed for initial warm-up
 - b: Normal control settings range from 1-3
 - c: Once the Food Warmer has reached the desired temperature, adjust the temperature control dial to a lower setting. It is recommended that the lowest possible setting that maintains food serving temperatures be used.

Note: this Food Warmer is not designed to cook soups or sauces, nor is it designed to re-thermalize cold or frozen products.

- Always keep the lid attached and closed when not serving.

Cleaning and Maintenance

Regular cleaning will help prolong the Food Warmer’s life.

- Always unplug the Food Warmer when not in use, when filling, or when cleaning.
- Spilled food should be removed immediately from exterior surfaces, with a damp soapy cloth. Do not use harsh or abrasive chemicals or scouring agents.
- The Food Warmer and lid are dishwasher-safe.
- Never immerse the appliance in water.