


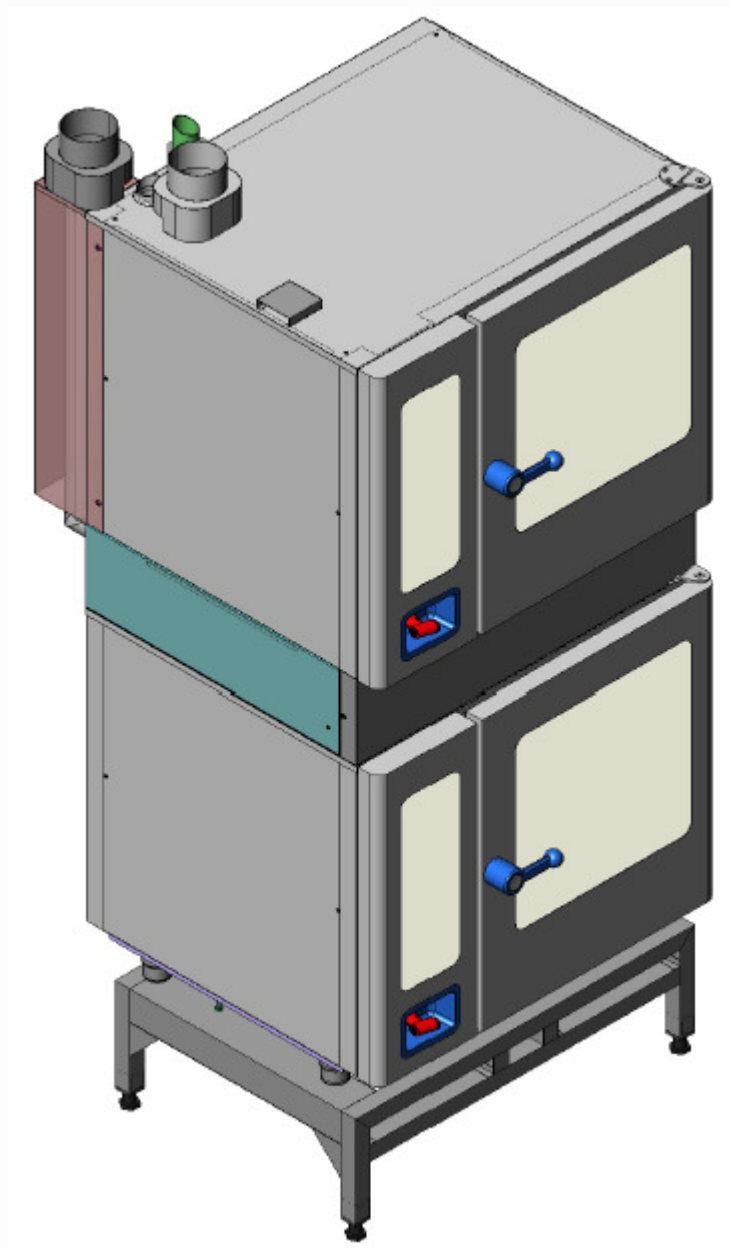
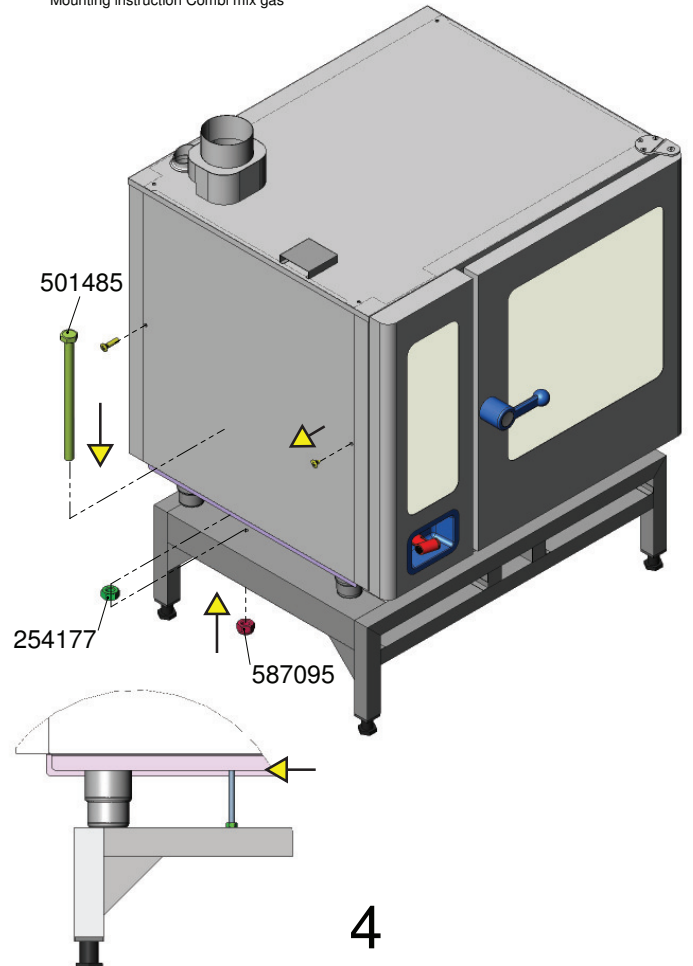
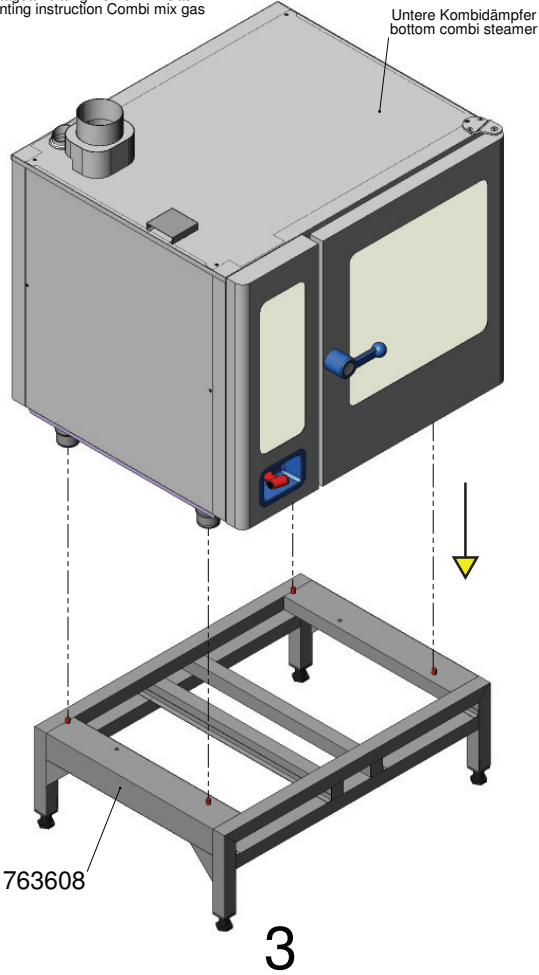



**Montageanleitung Kombi Mix Gas**  
**Mounting instruction Combi mix gas**  
**6-11/ 6-11 07**

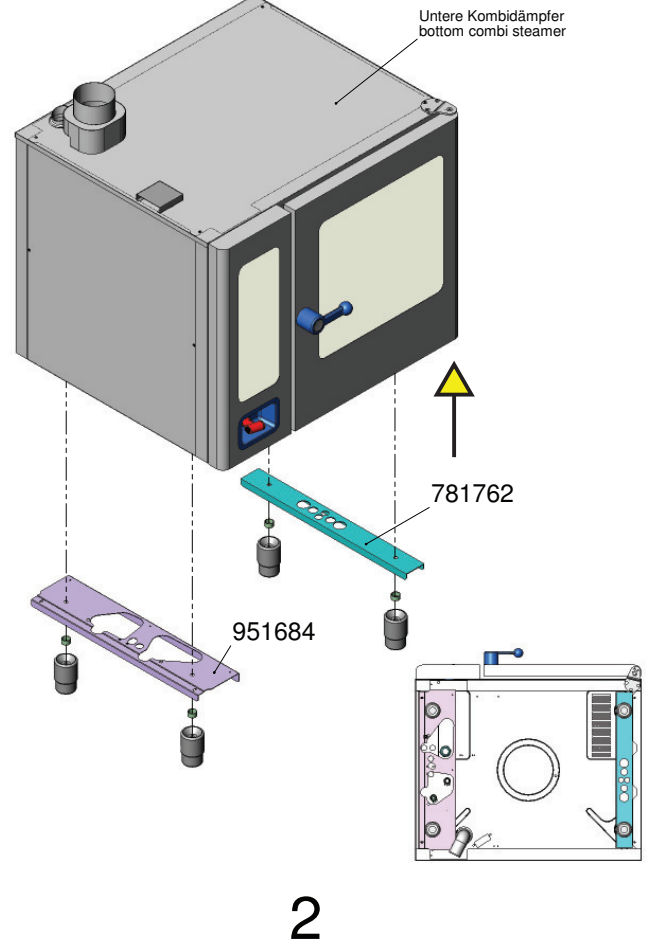

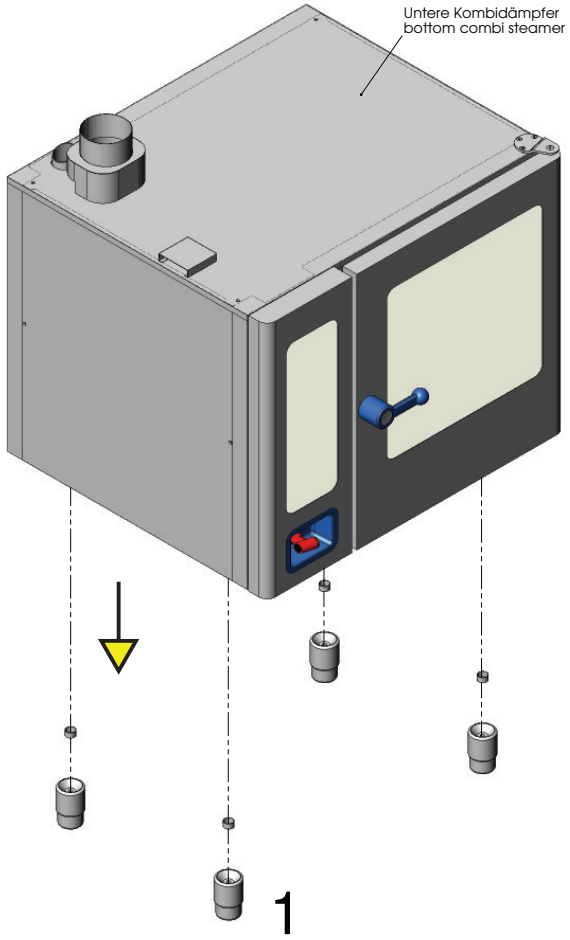


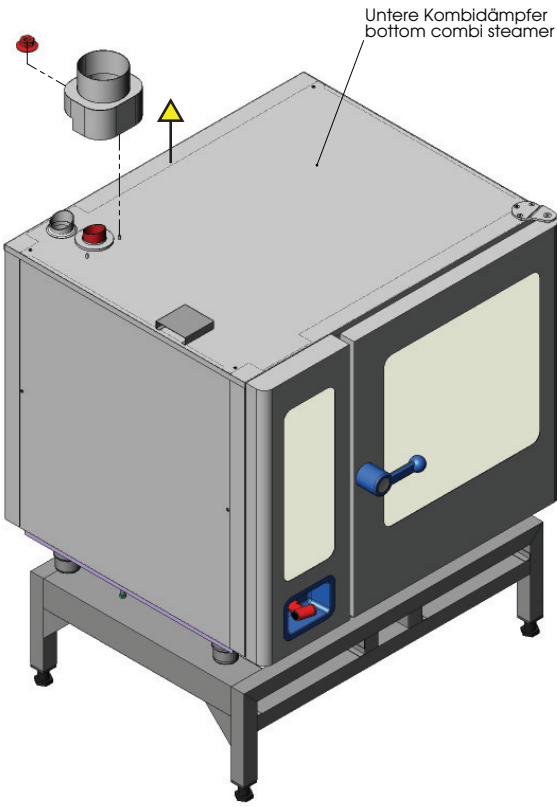


5

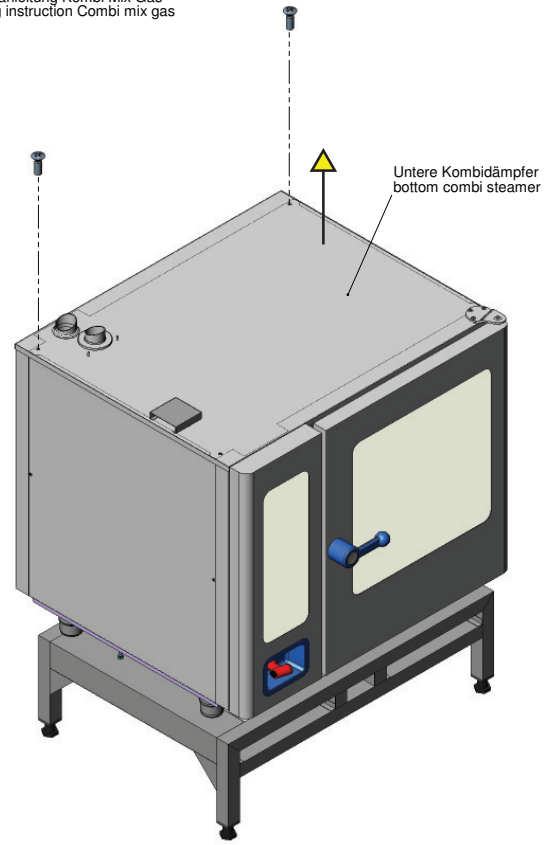





6

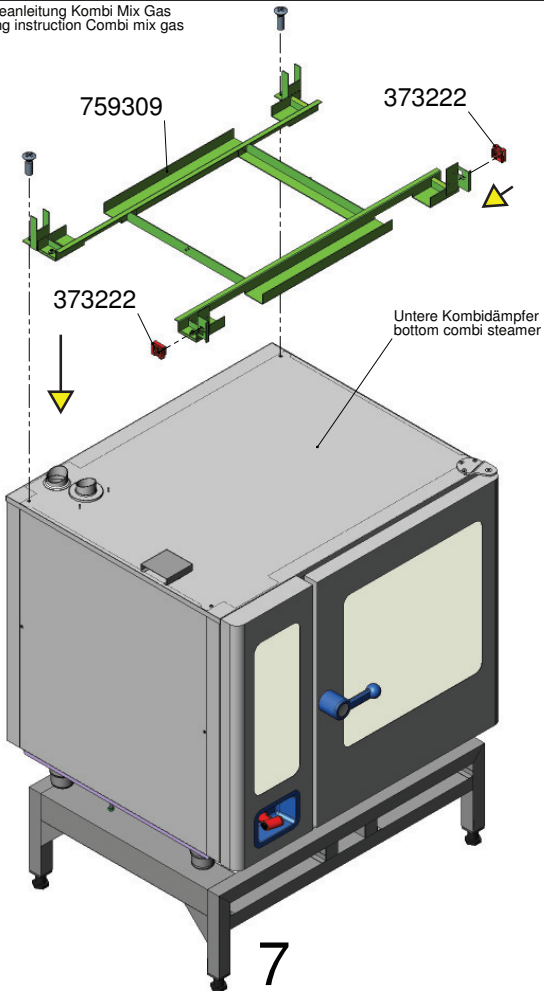


7

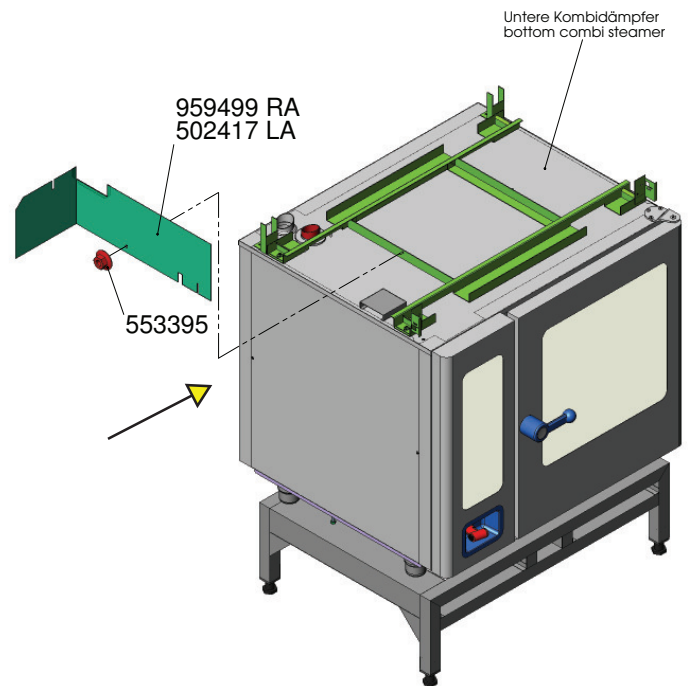


8

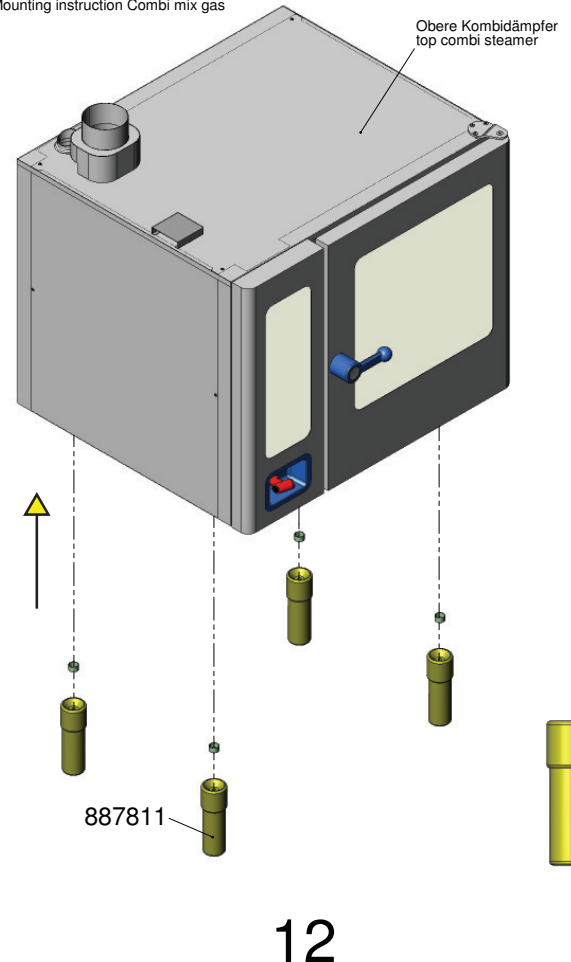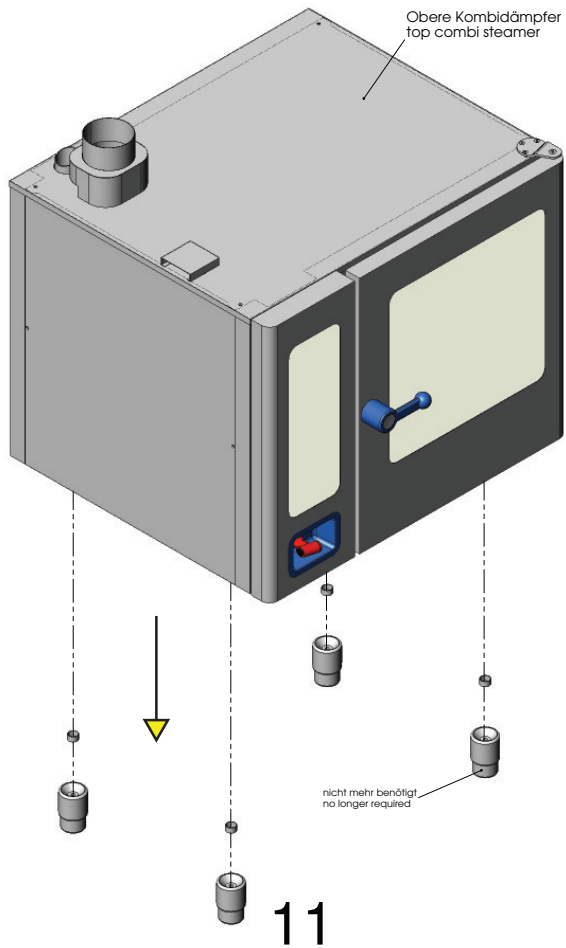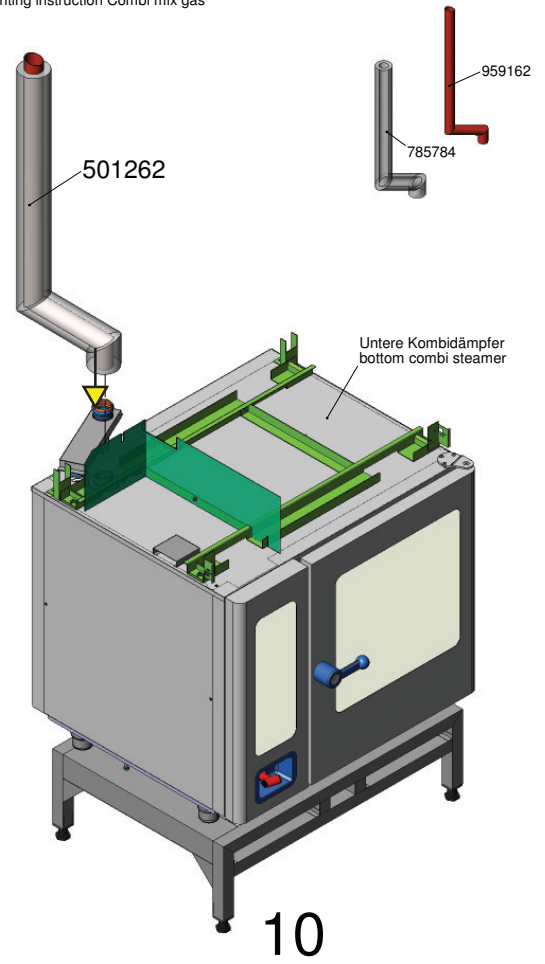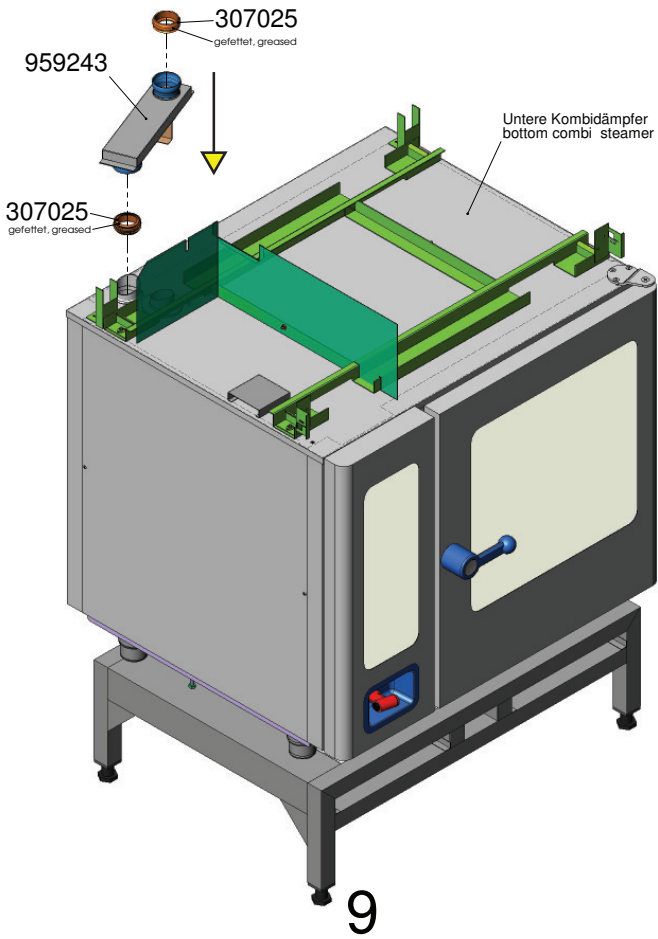


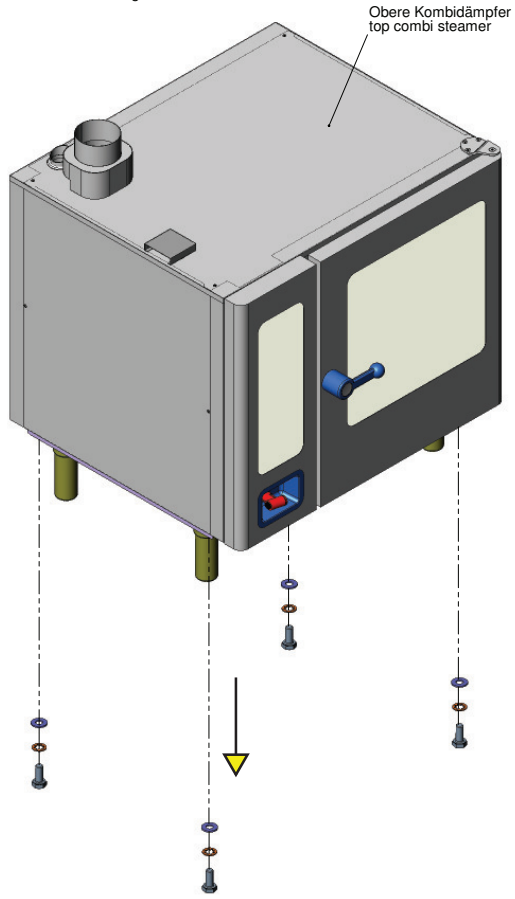


13

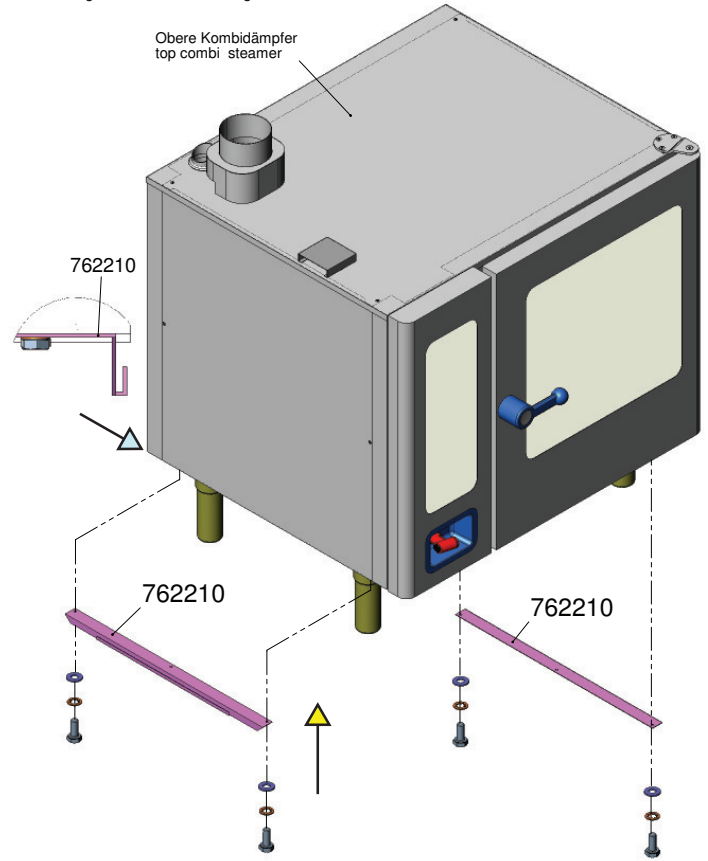


14

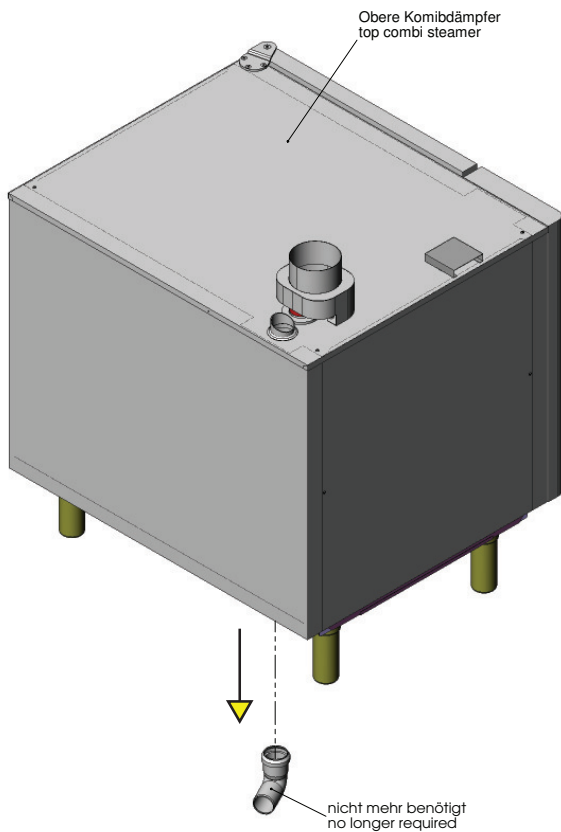

15

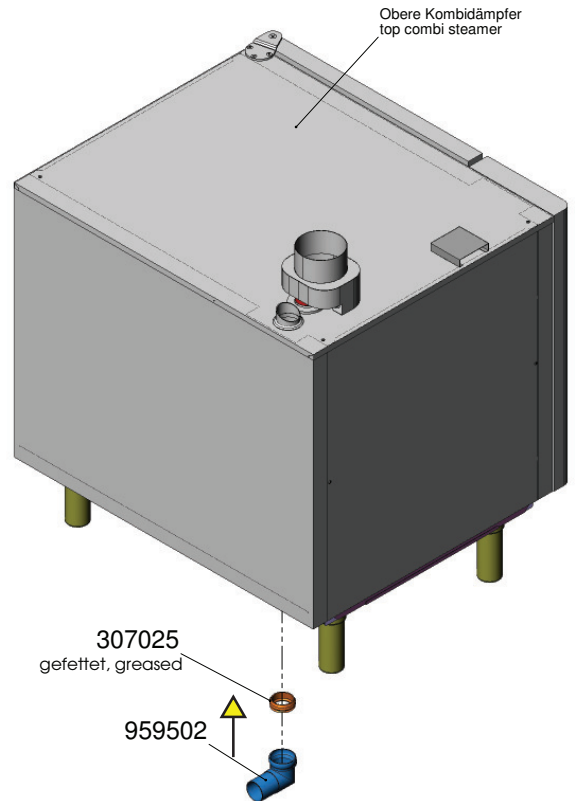


16

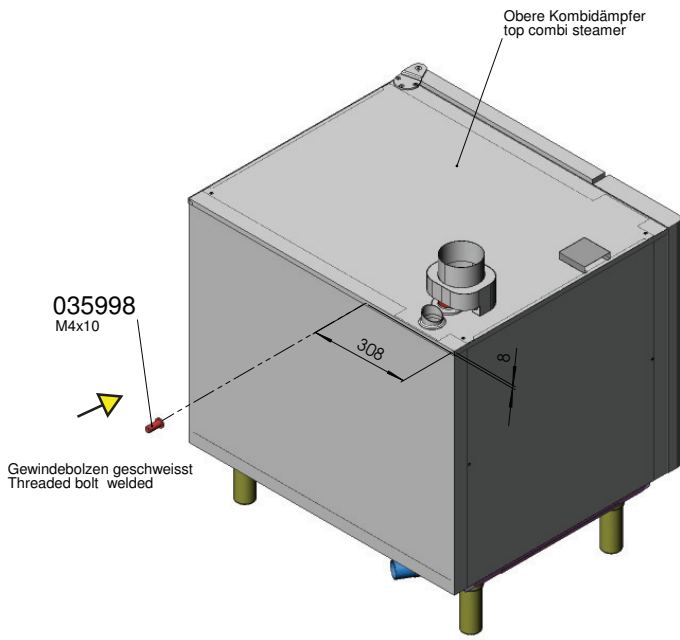


alternativ: Bohrung für Schraube 3,3mm  
alternative: drill hole for screw 3,3mm

17

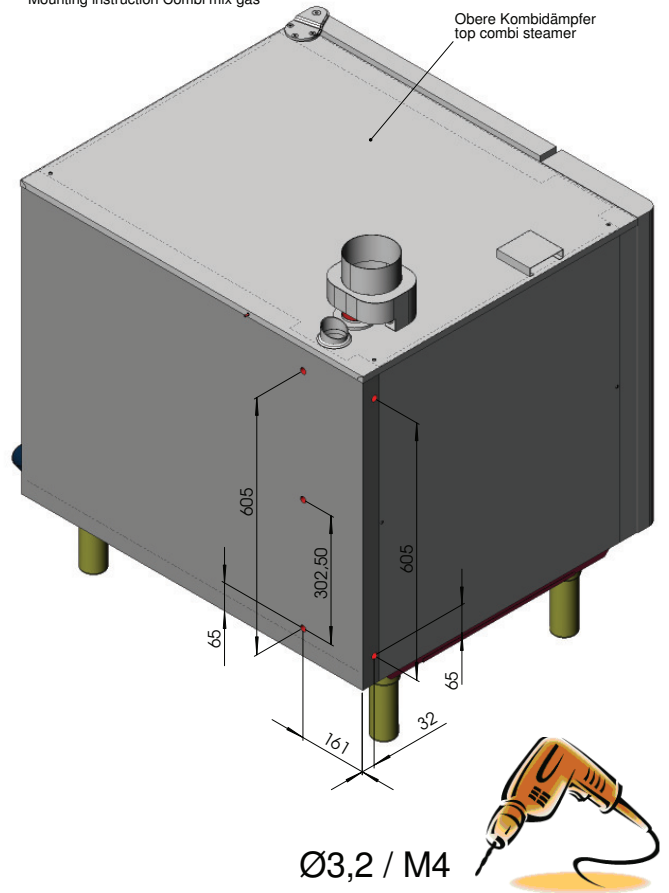


Ø3,2 / M4


18

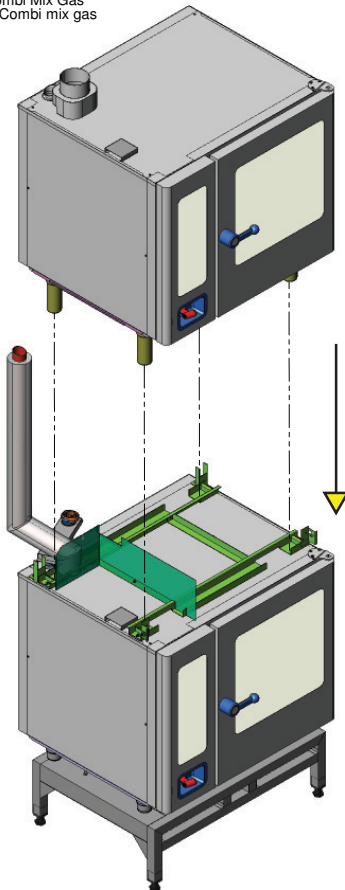


19

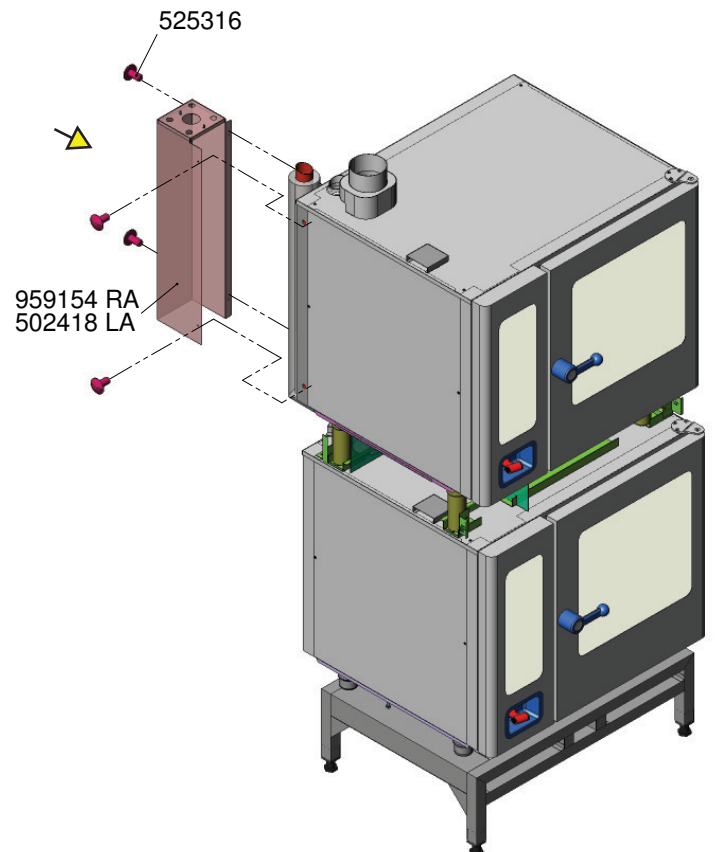


20

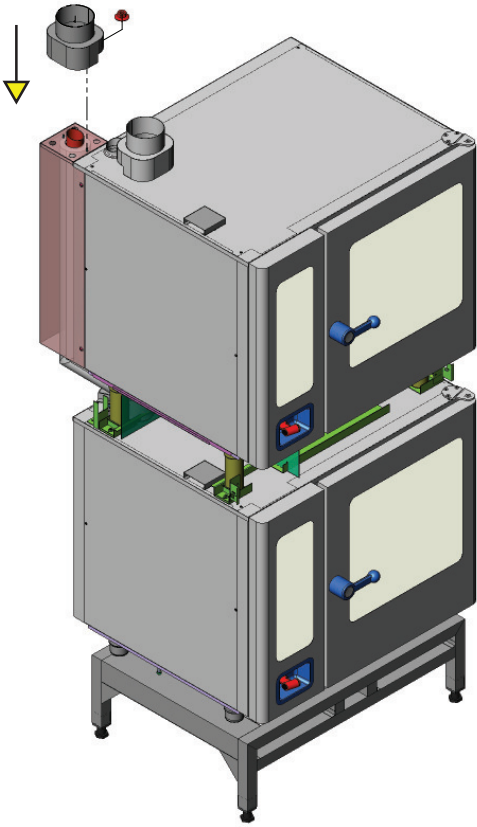


21

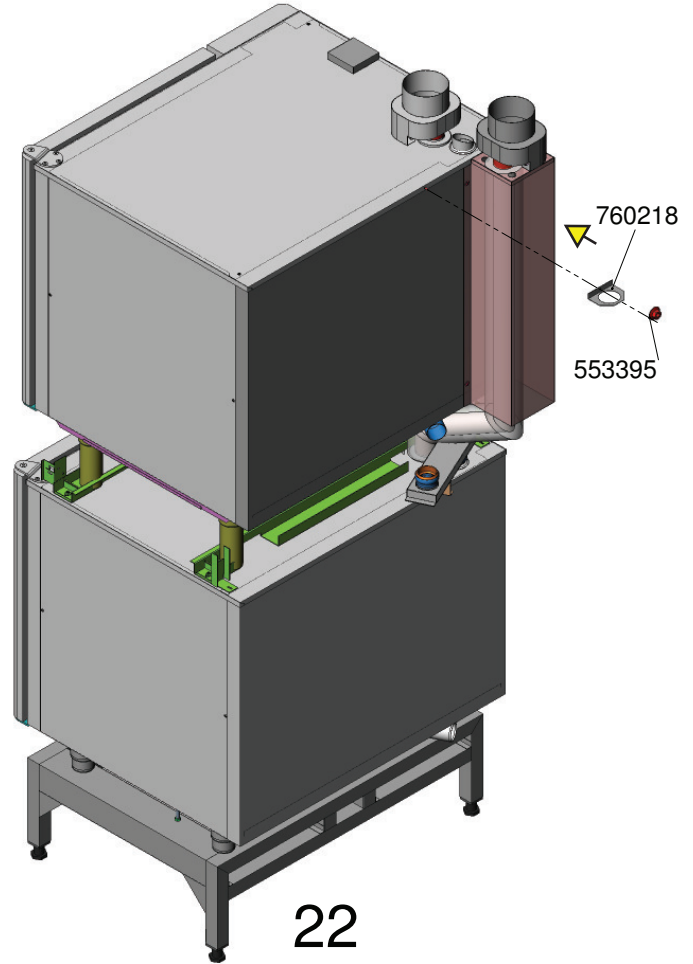


22

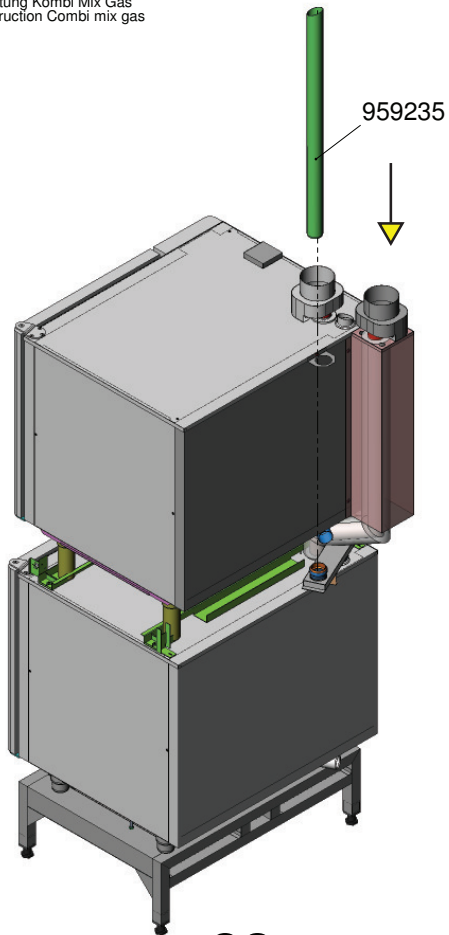


23

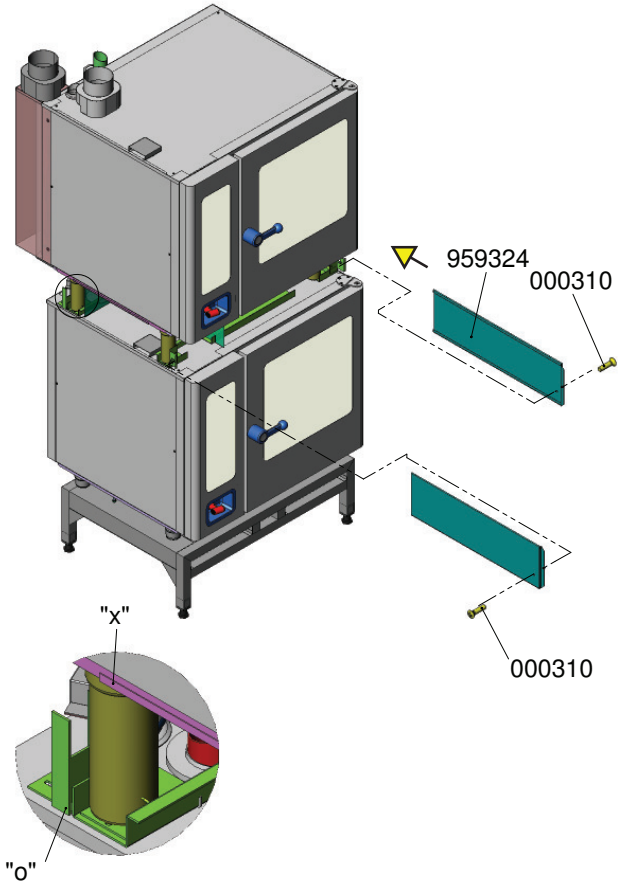

24

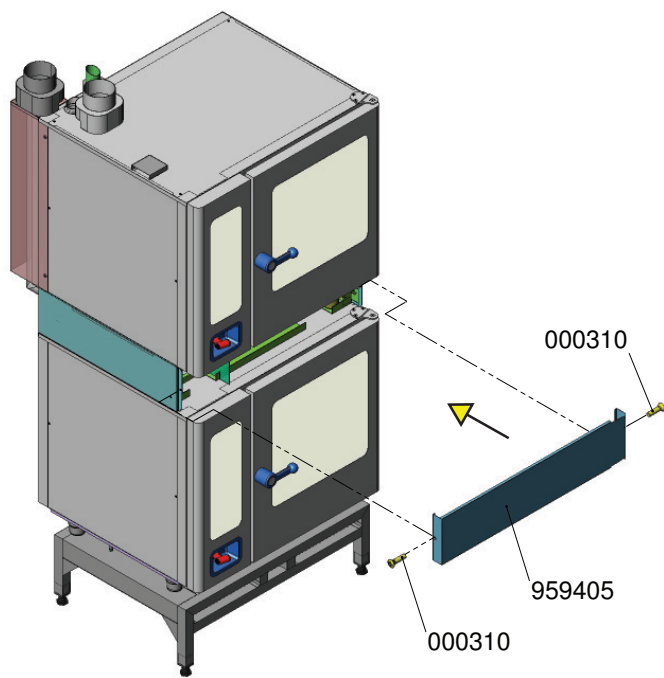

25

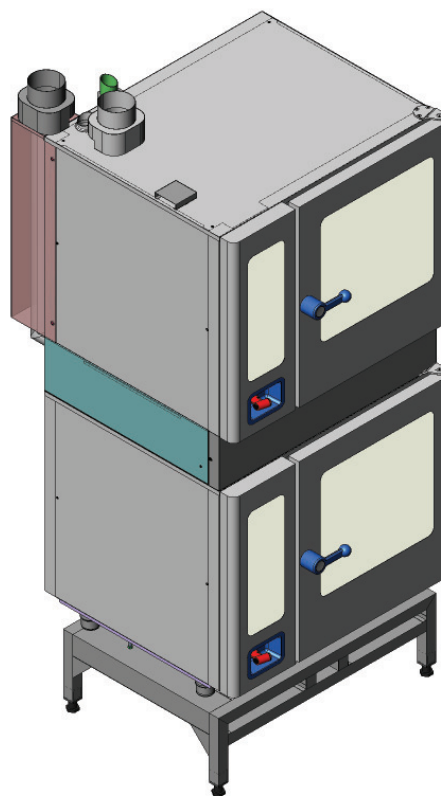

26