

Instruction Sheet 236065 for Fitting CT Probe to E32 / E33 Oven Controllers Using Kit 236060.


Suitable for the following models:

Turbofan E32T, E33T and E33D Ovens.

Turbofan E32D Ovens (Only if factory fitted with Core Temp Probe Connection on Control Panel).

Contents:

1 x Core Temp Probe (CT Probe).
1 x Core Temp Probe Holder.

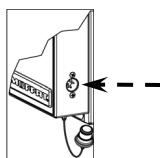

| | |
|--------------|------|
| Packed By: - | |
| Initial | Date |

1 x Dust Cap - Core Temp Socket.
1 x Screw M4 x 16.

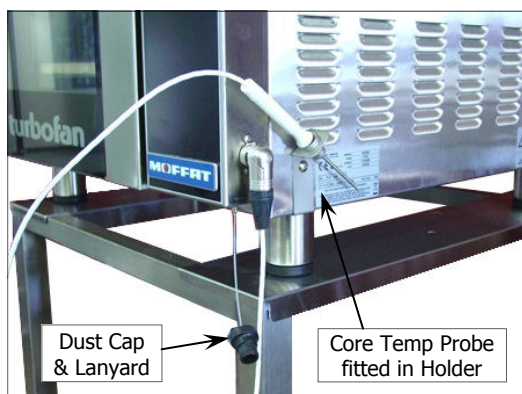


Figure 1



Figure 2

This Kit contains the Core Temperature Probe that enables you to cook by temperature instead of time. The Oven models listed above carry the added features required for facilitating this operating mode. For use of the CT Probe please refer to the Installation and Operation' manual provided with your specific Oven.

The Kit also contains a Core Temperature Probe Holder for the Probe and a Dust Cap to shield the plug connection when the Probe is removed. Please follow the steps below when fitting these to the Oven.




WARNING - DO NOT REMOVE THE CONTROL PANEL FROM THE OVEN TO FIT THE DUST CAP. THERE ARE LIVE CONNECTIONS BEHIND THIS PANEL.

To Attach the Dust Cap to the Oven:

1. The Control Panel is fitted with an M4 threaded insert * on the bottom face. Screw in the dust cap fixing screw and retaining cable.

* NOTE:

- If the Control Panel has a No.8 screw fitted in a plain hole, use the supplied M4 x 16 screw to thread the hole before attaching the dust cap fixing screw and retaining cable.
 - The CT Probe Holder Bracket can be used as a spanner to tighten the dust cap fixing screw. See Figure opposite.
2. Remove the Blanking Plug from the plug connection - The blanking plug will not be required after fitting the dust cap.
 3. When the CT Probe is not fitted to the oven, fit the dust cap into the plug connection to protect the from the ingress of dirt and moisture.

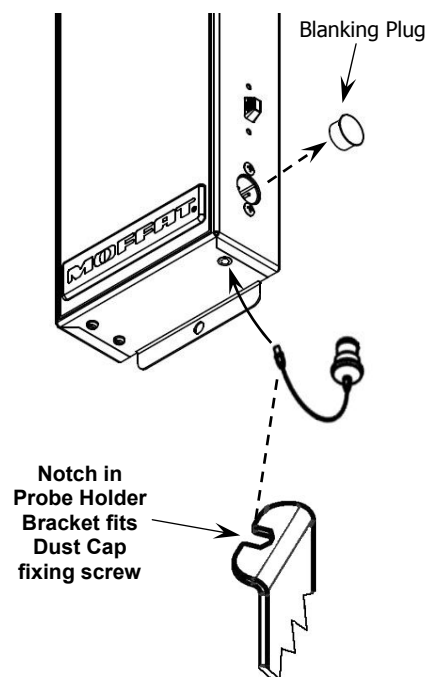

To Attach the Core Temp Probe Holder to the Oven.

1. Remove the screw at the front lower corner of the RH Side Panel.
2. Position the Probe Holder over the screw hole. Ensure that the bottom flange of the Holder is under the bottom of the side panel.
3. Fasten the CT Probe Holder with the screw removed in Step 1 above.
4. The Core Temp Probe can now be stored safely in this Holder while changing product in the Oven.
5. For longer term storage it is recommended that the Probe is removed from the oven for proper cleaning and stored in a drawer or cabinet.

